

K33S


Kawasaki Ninja 300 2013-

Kit for left side:

ID.	Description	Cat.No	Qty
1	Steel adapter	642	1
2	Bolt M12x40	1021	1
3	Bolt M10x60	850	2
4	Dural.cylinder d=70	470	1
5	Nut M10	810	2
6	Washer M10	804	4
7	Adapter for SL01	1137	1
8	Special washer	1138	1
9	Bolt M12x40	857	1
10	Bolt M6x25	877	3
11	Bolt M4x16	876	2

Kit for right side:

ID.	Description	Cat.No	Qty
1	Steel adapter	643	1
2	Bolt M12x40	1021	1
3	Bolt M10x60	850	2
4	Dural. cylinder d=70	470	1
5	Nut M10	810	2
6	Washer M10	804	4
7	Adapter for SL01	1137	1
8	Special washer	1138	1
9	Bolt M12x40	857	1
10	Bolt M6x25	877	3
11	Bolt M4x16	876	2

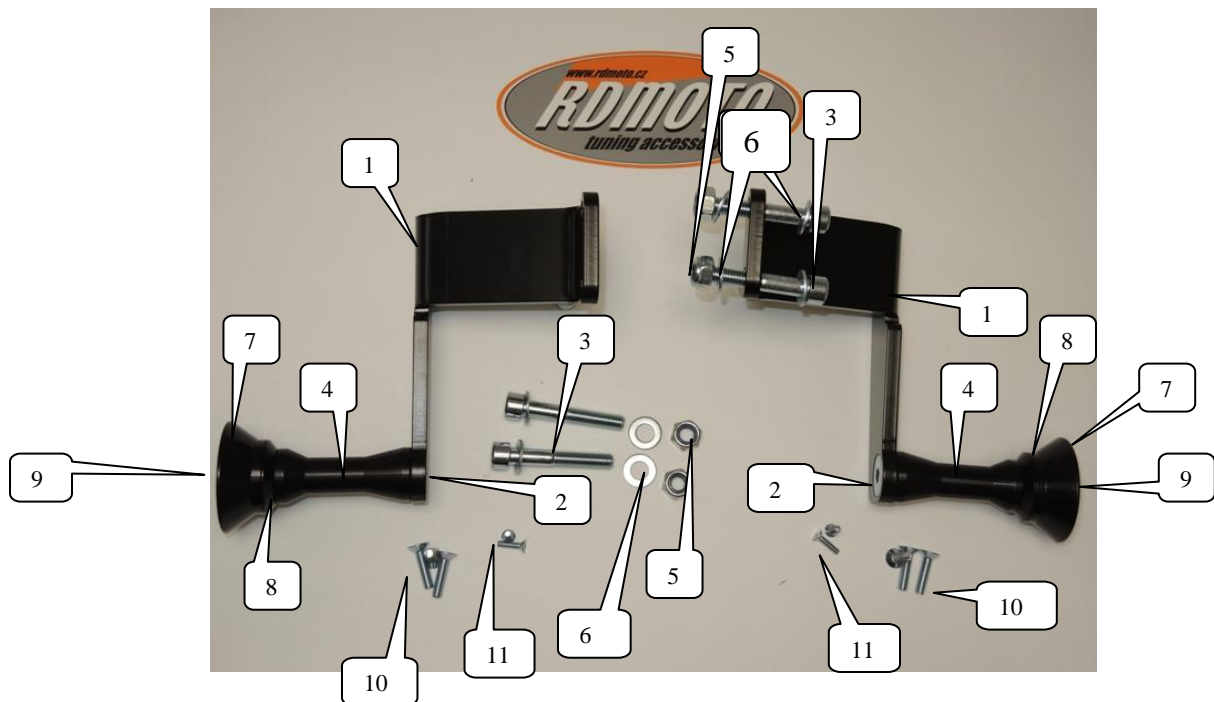

Instruction to assembly:

**Assembly for left and right side is same.
Do the first left side and after do the right side.**

1. Take off fairings and bolts M10 from frame.
2. Mount dural.cylinder ID.4,use bolt M12x40 ID.2 into the steel adapter ID.1.
3. This set mounted on frame , use bolts ID.3 washers ID.6 and nuts ID.5.
4. Put fairing back on the bike.
5. The bolt M12 ID.9 insert into the adapter for SL01 ID.7 and special washer ID.8 and mounting it on the steel adapter.
6. Use bolts M6x25 ID.10 for fixed sliders, insert cover and use bolts M4x16 ID.11

Warning – use the glue of all threads. Medium strong.

